



Classic America

Wi-Fi App Installation and Instruction Manual for Mini Split Air Conditioners with Heat Pump.

The information provided in this manual applies to all Classic America Mini Splits with Wi-fi function. Please read through the manual carefully.

Let's get started!

Operation guideline. Please take below simple guideline instruction as a quick reference.

Operation Steps	First Time App Installation	Re-installing APP (Previously registered)
Step 1	Download and Install APP	YES
Step 2	Activate APP	YES
Step 3	Registration Account	NO
Step 4	Login	YES
Step 5	Add Device to control	Previously Registered Device (s) will appear.

Note: If you registered the account and added one or more devices before, when you re-install the APP and login, the previously added device or devices will reappear

FCC Caution (FCC ID: 2ANDL-WBR3/2ANDL-TCWBRCU1/2ANDL-WBR1)

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- The distance between user and device should be no less than 20cm.

CONTENTS

Wi-Fi Module specification and basic information.....	1
Download and Install the App.....	2
Activate APP.....	3
Registration.....	4
Login.....	5
Add device.....	6
Air conditioner control.....	8
Account management.....	26
Notice	27
Troubleshooting	28

Wi-Fi Module specification and basic information

1. Minimum specifications on a Smart phone:

Android 6.0 version or higher

IOS 11.0 version or higher

2. Basic parameters for Wi-Fi module

Parameters	Details
Network frequency	FCC:2.412-2.462GHz,CE:2.412-2.472GHz
Standards of WLAN	IEEE 802.11 b/g/n(channels 1-14)
Protocol stack support	IPv4/IPv6/TCP/UDP/HTTPS/TLS/MulticastDNS
Security support	WEP/WPA/WPA2/AES128
Network type support	STA/AP/STA+AP
Bluetooth Frequency Range(Optional)	2.402-2.480GHz
Bluetooth RF Conducted Power(Optional)	6.5dBm

Download and Install the App



SmartLife-SmartHome

For Android smart phone

Method1: Please scan the QR code with a browser scanner, download and install the APP.

Method2: Open the Google "Play Store" on your smart phone and search "SmartLife-SmartHome" , download and install the APP.



For IOS smart phone

Method1: Please scan the QR code and follow the tips to get into "App Store", download and install the APP.

Method2: Open the Apple "App Store" on your smart phone and search "SmartLife-SmartHome" , download and install the APP.



Note:

Please enable the permissions of Storage/Location/Camera for this APP when installing. Otherwise it will have some problems when operating.

Activate APP

The first time the app is used, it will need to be activated.


1. Launch the APP "SmartLife-SmartHome" on your smart phone.




SmartLife-SmartHome

2. Method1: Tap button "Scan" and scan the Activation QR code below


Method2: Tap "or Enter Activation Code" on bottom of the screen, then enter the activation code and tap "CONFIRM".

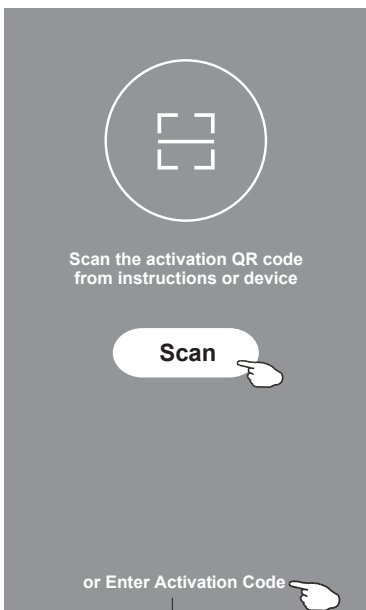

Activation QR code and activation code

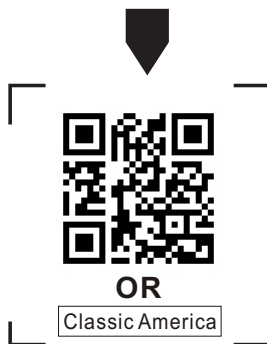


Note: Without the QR code or activation code, you cannot activate the APP and use it . Please keep these in a safe place

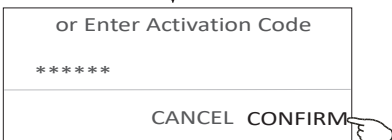

Registration

1.If you don't have an account please tap the "Sign up" button.

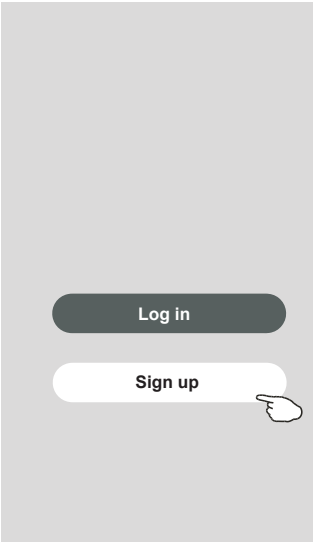

- 2.Tap">" and choose the country.
- 3.Enter your e-mail address.
- 4.Tap the button "Get verification code".
- 5.Enter the verification code you received from e-mail.

A screenshot of a 'Register' form. At the top, there is a back arrow and the title 'Register'. Below the title, there are two input fields: 'Country' with a right-pointing chevron and 'Mobile Number/Email'. Below these fields, there is a checkbox with the text 'I Agree Privacy Policy and User Agreement'. At the bottom, there is a dark grey button with the text 'Get verification code'. A hand icon is pointing at the button.

enter your e-mail address here

Search the country or slide the screen up/down to find and choose the Country.

A screenshot of a 'Country Chosen' screen. At the top, there is a back arrow and the title 'Country Chosen'. Below the title, there is a search bar. Below the search bar, there is a list of countries starting with 'A': Afghanistan, Albania, Algeria, Angola, Argentina, Armenia, and Australia. To the right of the list, there is a vertical scroll bar with letters A through Z. A hand icon is pointing at the list.

Registration

- 6. Create a password with 6-20 characters including characters and numbers.
- 7. Tap "Done".

<

Enter verification code

* * * * *

Verification code is sent to your email: *****@****,Resend(52s)

Didn't get a code?

<

Set Password

Password ***** X

Done

Enter th APP

Login

- 1. Tap "Log in".
- 2. Enter your registered email and password.
- 3. Tap and read “Privacy Policy” and “User Agreement” carefully, then choose “ I Agree” , and, Tap "Log in" button.

Log in

Sign up

<

Login

Country >

Please enter the account *****

Password *****

☒ I Agree Privacy Policy and User agreement

Log in

Forgot password

 
enter your account(e-mail) here

enter the password

Login

If you forgot the password or you want to reset the password, proceed as below:

1. Tap "Forgot password".
2. Enter your account(e-mail address) and tap button "Get verification code".
3. Enter the verification code received by your e-mail.
4. Set the new password and tap "Done" button.

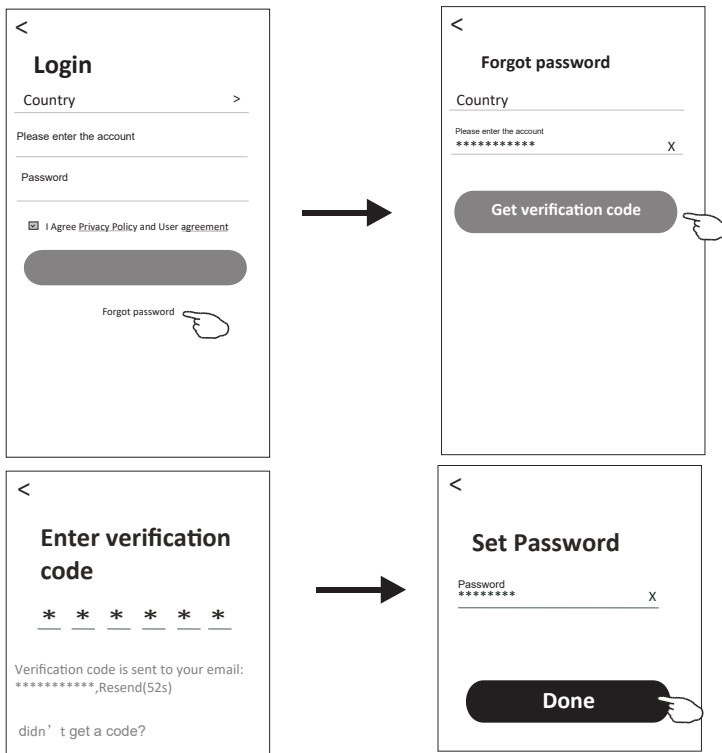

Add device

You can then turn on the air conditioner and reset the Wi-Fi module using the remote control by following one of these steps:

Method 1: Press the **DISPLAY** button 6 times in 8 seconds , then you will hear 2 beeps and AP will appear on the indoor display.


Method 2: Press the **ECO** button 6 times in 8 seconds , then you will hear 2 beeps and AP will appear on the indoor display.

Method 3: Long press **Mode** and **^** together over 3 seconds , then you will hear 2 beeps and AP will appear on the indoor display.



Add device

1-Add device through scan QR code

1. Apply power to the unit, but no need to turn on the air conditioner.
2. Click "+" in the upper right corner of the "Home" screen or tap "Add device" on a room which has no devices.
3. Scan the Activation QR code on the manual or on the unit
4. Input the password of the Wi-Fi router to which your smart phone is connected, then tap "Next".
5. Add device.
6. Read the instruction carefully and tap "Connect now".
7. In the network setting screen, select "SmartLife-****", and tap "<".
8. You can see the percent rate of the connection process, and "PP", "SA", "AP" will appear on the indoor display.
 - "PP" means "Searching for the router"
 - "SA" means "Connected to the router"
 - "AP" means "Connected to the server"

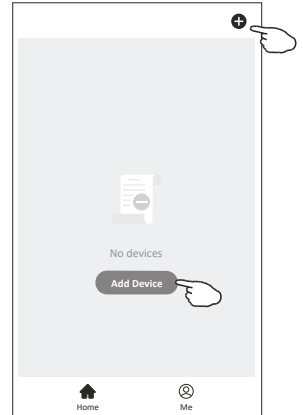


IF THIS SCREEN POPS UP, SELECT 'AP' BY CLICKING ON THE TOP RIGHT

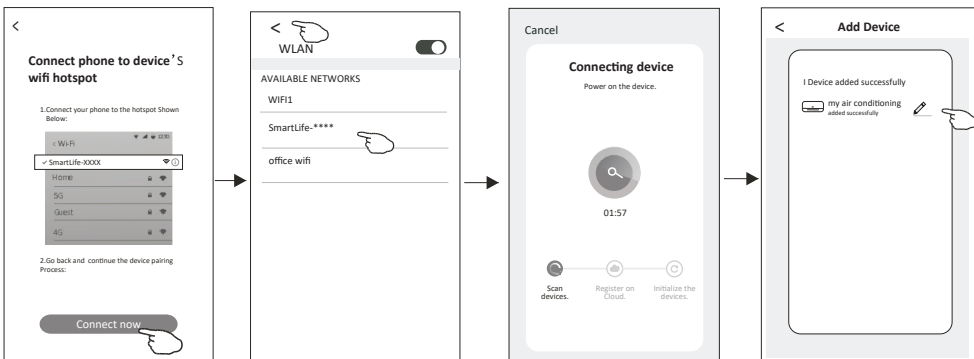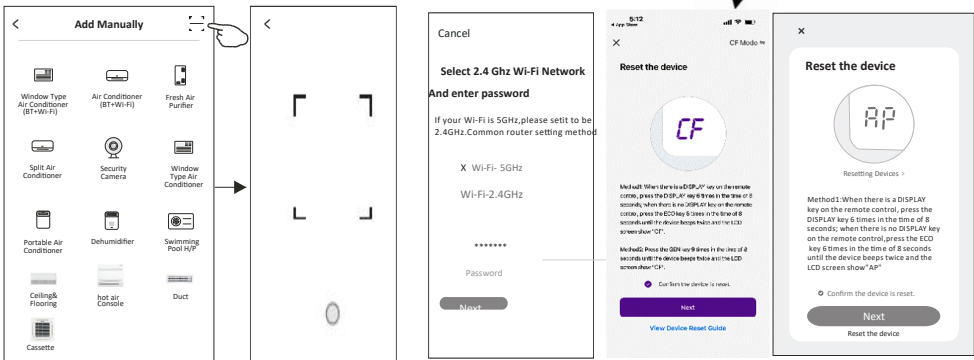


Air conditioner control

The device control screen will pop up automatically after adding the device the first time. Or, next time, you can bring it up manually by tapping the device name on the home screen.

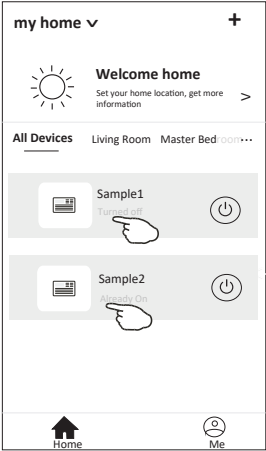


This is your main control screen

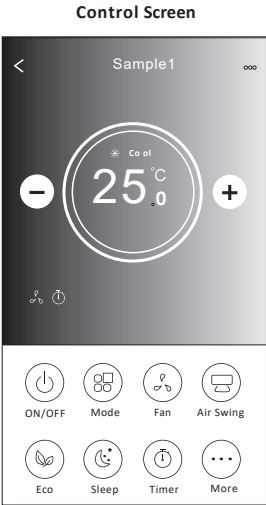

Air conditioner control

Control Screen Detail



The main control interface

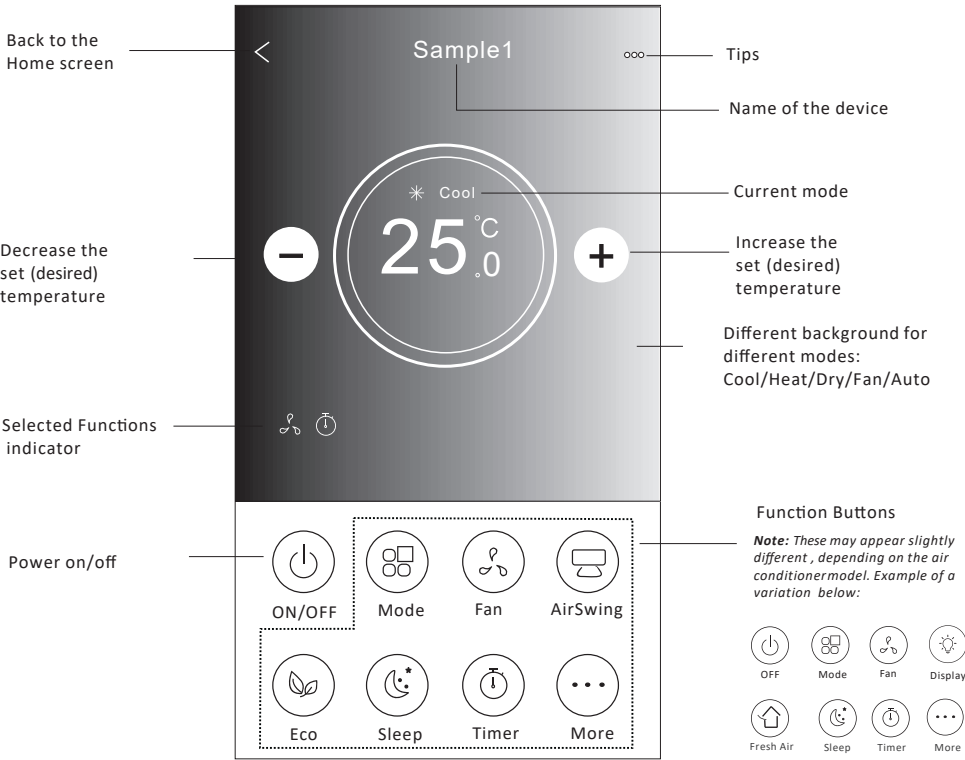

Air conditioner control

-Mode selection


- 1.Tap the Mode button.
- 2.There are 5 modes on the Mode screen, tap one button to set the Air conditioner working mode.
- 3.Tap the X button to go back to the main control screen.
- 4.The mode and background will change on the main screen.

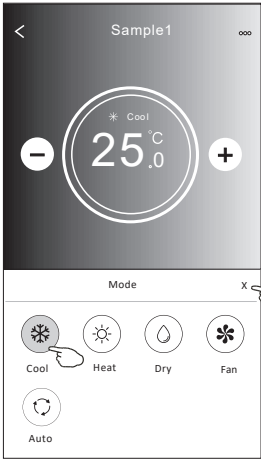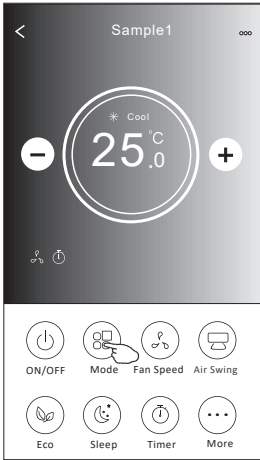

Note: please read the details for each mode in the user manual to maximize comfort.

Fan speed selection

 
- 1.Tap the Fan speed button.
- 2.Choose your desired fan speed and tap it.
- 3.Tap the X button to go back to the main control screen.
- 4.The selected fan speed indicator will appear on the main screen.

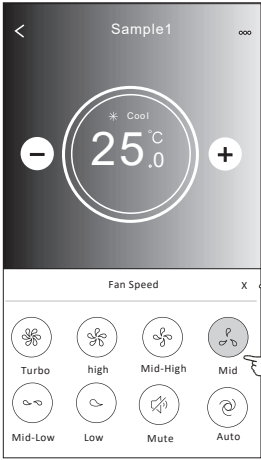

Mode	Fan Speed
Cool	All speeds
Fan	All speeds
Dry	
Heat	All speeds
Auto	All speeds

Note:
Fan Speed cannot be adjusted on Dry mode .

 Note: Fan Speed screen may appear slightly different , depending on the air conditioner model.
Example of a variation below:

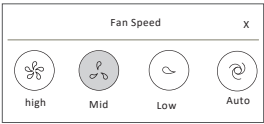


Air conditioner control


-Air Flow control

- 1.Tap the Precision Air Flow button or Air Swing button.
- 2.Choose your desired air flow and tap it.
- 3.Tap the X button to back to the main control screen.
- 4.The selected air flow indicator will appear on the screen.

 Note: For some models without auto Left-Right flow control, If you activate this, you will hear a beep,but no action will take place.

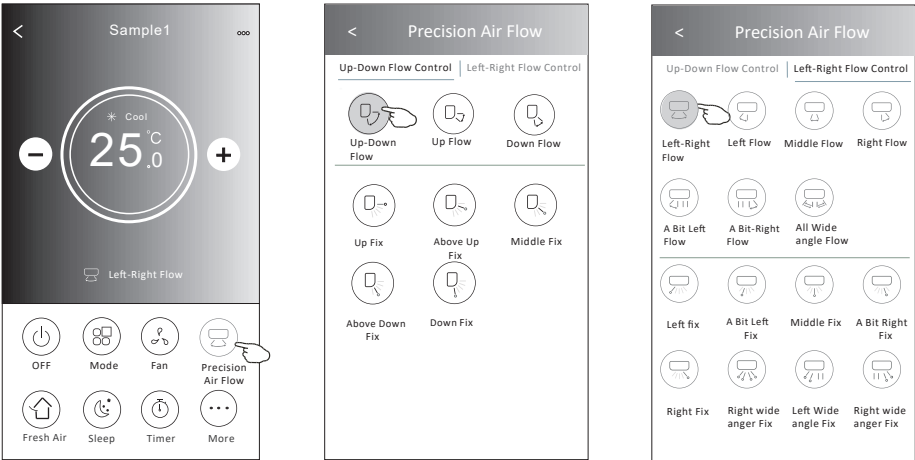

 Note: The Main control screen and Air Flow screen may appear slightly different , depending on the air conditioner model. Example of a variation below:


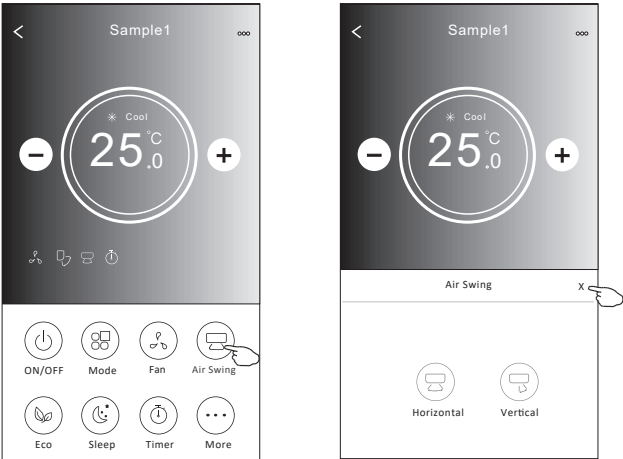


Air conditioner control

ECO function

- 1.For the Eco function, just tap the button to activate the function, the button will light up and the indicator will appear on the screen.
- 2.Tap again to disable the function.
- 3.This function will limit the set (desired) temperatures for some models

  
In Cooling mode, the minimum set (desired) temperature allowed will be 79F (26C) .
In Heating mode, the maximum set (desired) temperature allowed will be 77F (25C) .

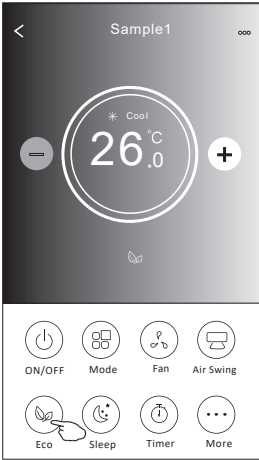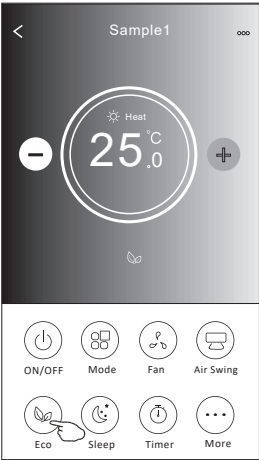

Mode	ECO enabled
Cool	Yes
Fan	
Dry	
Heat	Yes
Auto	

ECO is disabled in Fan/ Dry/Auto modes .

 Note: The Main control screen and ECO control method may appear slightly different , depending on the air conditioner model.Example of a variation is shown below:


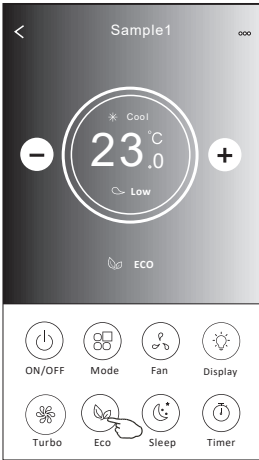


Note:
ECO is disabled in Turbo/Sleep modes for some air conditioner models.

Air conditioner control

Sleep function

 
 
- 1.Tap the Sleep button.
- 2.Choose your desired sleep mode and tap it.
- 3.Tap the X button to go back to the main control screen.
- 4.The selected sleep mode indicator will appear on the screen.

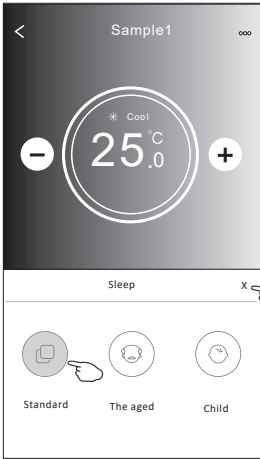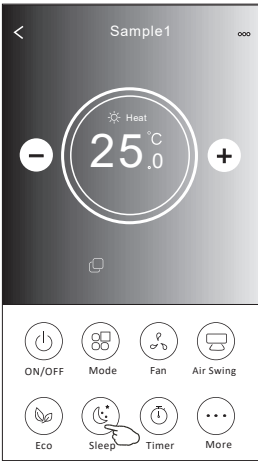

Mode	Sleep enabled
Cool	Yes
Fan	
Dry	
Heat	Yes
Auto	

Sleep is disabled in Fan/ Dry/Auto modes .

  Note:
The Main control screen may appear slightly different ,depending on the air conditioner model. Example of a variation is shown below:

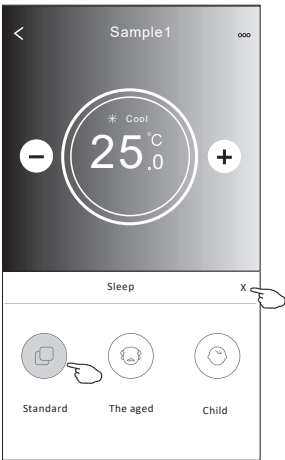
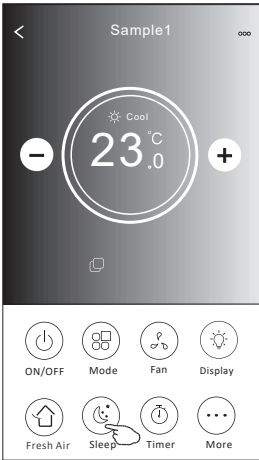


Note:
Sleep is disabled on Turbo/ECO mode for some air conditioner model..


Air conditioner control

Timer OFF setting (to have the unit turn off automatically at set times)

  
1. Tap the Timer button.
2. Tap + in the upper right corner of the Timer main screen or the Add Timer button
3. Choose the Time/Repeat/and set Switch OFF, then tap Save.
4. The timer(off) will appear on the main screen.

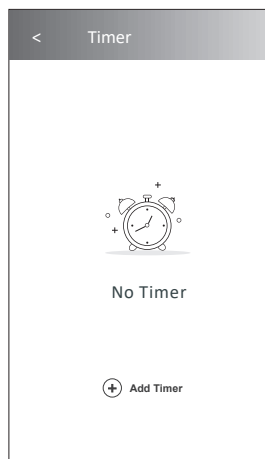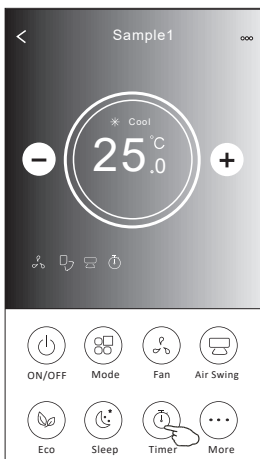


Slide up or down to select time

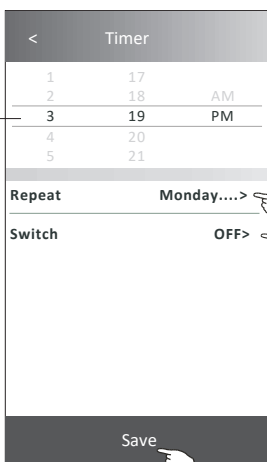 

 Tap repeat> then tap your desired repeat days or Once, then tap Confirm your selection.

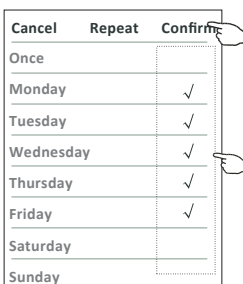



 
Tap Switch> then slide the screen to choose OFF and Confirm.



Air conditioner control


Timer ON setting (to have the unit turn ON automatically at set times)

   1. Tap the Timer button.
2. Tap + in the upper right corner of the Timer main screen or the Add Timer button.
3. Set the Time/Repeat Date/Power(ON)/Set Temp/Mode/
Fan speed/Precision Air Swing as your desired and then tap Save.
4. The timer will appear on the main screen.

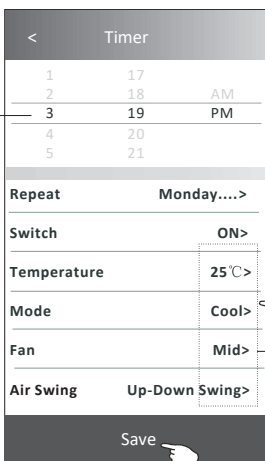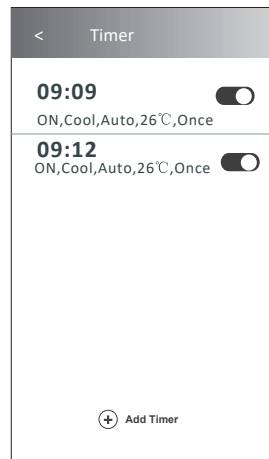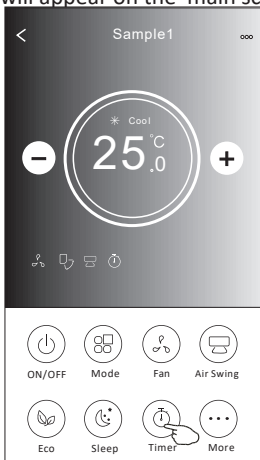


Slide up or down
to select time

 Tap repeat > then tap your
desired repeat days or Once, then
tap Confirm your selection.

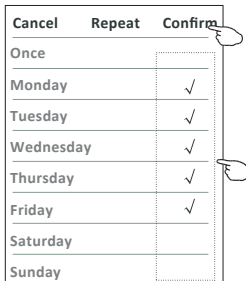

 Tap Switch> then slide the
screen to choose ON
and Confirm.


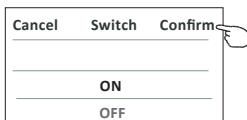


Tap Temperature/Mode/Fan Speed/
Air Flow > one by one then set as
your desired as mentioned on the previous
chapter and tap Confirm the setting.

Air conditioner control


Timer management

  - 1.Change the Timer setting:
Tap anywhere of the timer list bar except the switch bar to get into the Timer setting screen, change the setting and then tap save.
- 2.Enable or Disable the Timer:
Tap the left of the switch to disable the Timer.
Tap the right of the switch to enable the Timer.
- 3.Delete the Timer:
Slide the list bar of the Timer from right to left until Delete button appears, then tap on it to delete.

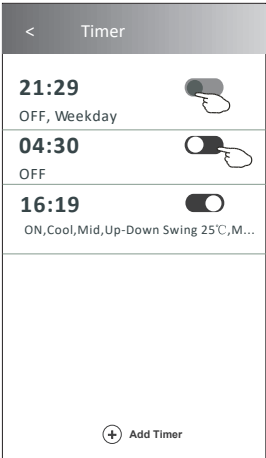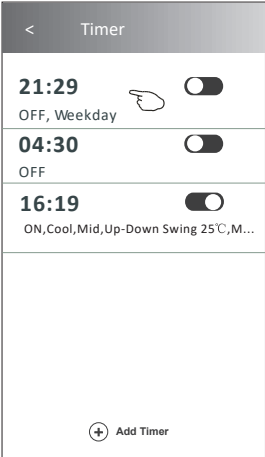

Slide left to disable the Timer.

 Slide right to enable the Timer.




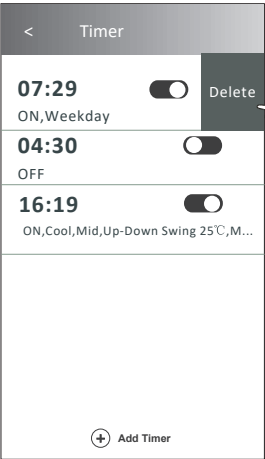


Air conditioner control

One-time

Some air conditioners support quick one time (one shot) and weekly scheduling on the Timer Screen

  
 
 
1. Click the timer button to enter.
2. Click on One-time and Add Timer
3. One-time supports setting the air conditioner to turn on or off, executing once at the set time and then forgetting the setting. A maximum of 2 timers (one ON and one OFF) can be set. **For the ON Timer, the set (desired) temperature and other settings will be the last manually adjusted.**

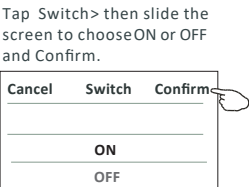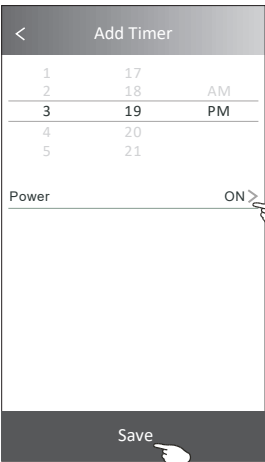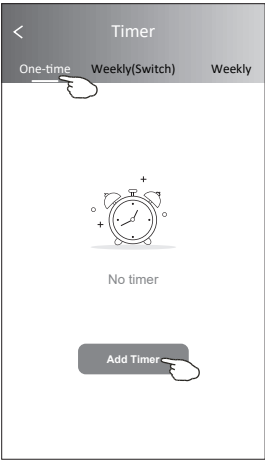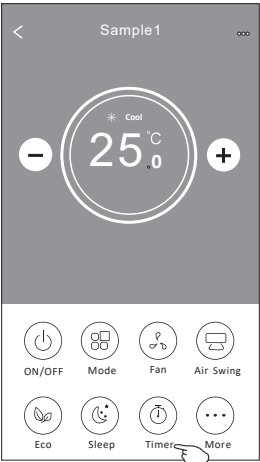


Air conditioner control

Weekly(Switch)

   
3. Weekly (Switch) supports setting the air conditioner to turn on and off in a weekly cycle or one-time form. A maximum of 8 timers can be set. **For the ON Timer, the set (desired) temperature and other settings will be the last manually adjusted.**

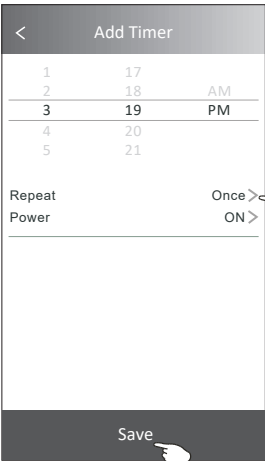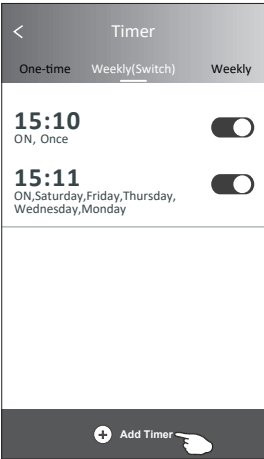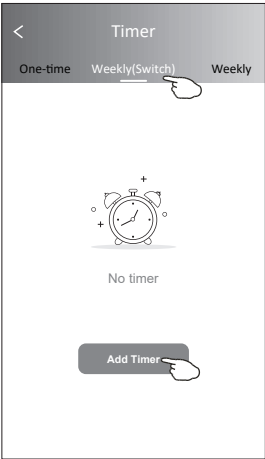

 Tap repeat > then tap your desired repeat days or Once, then tap Confirm your selection.

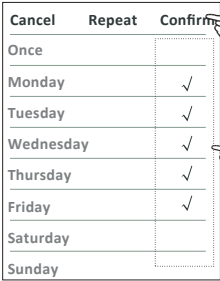



 
Tap Switch > then slide the screen to choose ON and Confirm.




Air conditioner control

Weekly

   
4. Weekly supports setting the air conditioner’s switch, temperature, mode, and fan speed in a weekly cycle or one-time form. A maximum of 8 timers can be set.

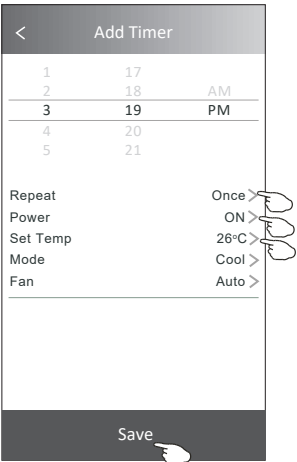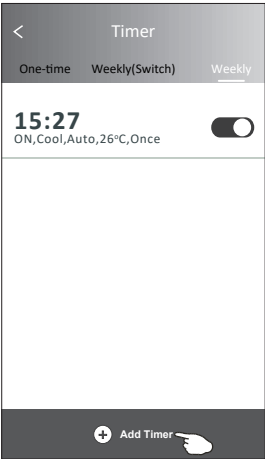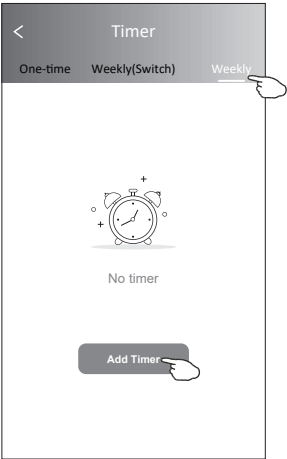

 Tap repeat> then tap your desired repeat days or Once, then tap Confirm your selection.

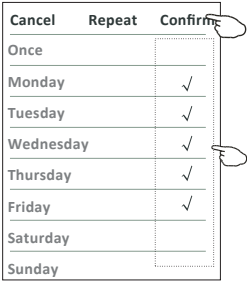

 Tap Switch> then slide the screen to choose ON and Confirm.




Tap Temperature/Mode/Fan Speed/ Air Flow > one by one then set as your desired as mentioned on the previous chapter and tap Confirm the setting.


Air conditioner control

More functions

 1. Tap the More button to operate additional functions if it appears on the screen.

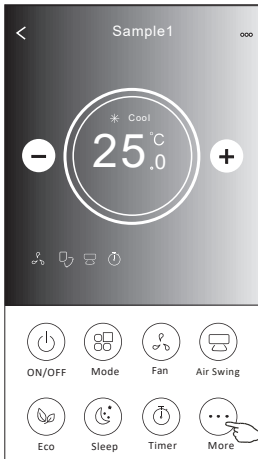

 Note:
Some air conditioner models don't have the more button.

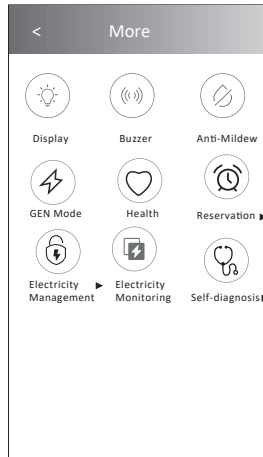

Note: The appearance may be different, some icons will be hidden if the air conditioner does not have this function or it is not enabled in the current mode.

2. Tap the "  " to switch on/off the indoor LED display.
Display
3. Tap the "  " to switch on/off the buzzing when operating through the Wi-Fi APP.
Buzzer
4. Tap the "  " button to activate the Anti-Mildew function, if it is available on the screen.
Anti-Mildew
After the AC is commanded off, it will start drying, reduce residual moisture and prevent mold.
After this function finishes, it will automatically turn off.
5. Tap the "  " button to switch on/off the healthy function, if it is available on the screen.
Health
It activate the antibacterial ioniser function. This function only for models with the ioniser generator

 
 
Air conditioner control

More functions

6. Tap the "Electricity Monitoring" button if it is available on the screen.
In this function, you can monitor the air conditioner's electricity consumption.



Electricity Monitoring ►

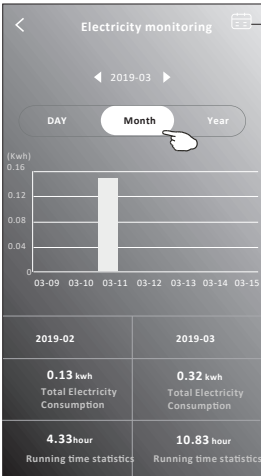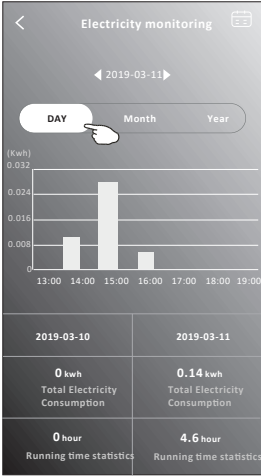

You can tap this button to pop up the calendar and then select the date.

7. Tap the "Self-Cleaning" button, if it is available on the screen.
Self-Cleaning

Check the details of the Self-Cleaning function in the User Manual.

8. Tap the "8°C Heat" button, if it is available on the screen.

This function helps to keep the room temperature over 46F (8C). Check the details of the 8°C Heat function in the User Manual.



8°C Heat

 
 
 
9. Tap the "Reservation" button, if it is available on the screen.

You can set the time, repeat day, temperature, mode, fan speed, air flow as desired and then tap Save to activate the function.

The air conditioner will automatically reach your settings at the appointment time.



Reservation ►

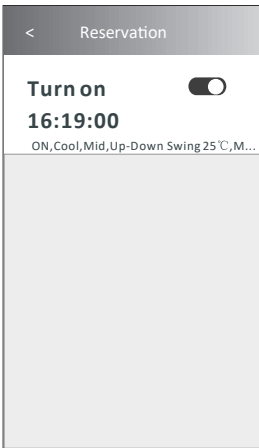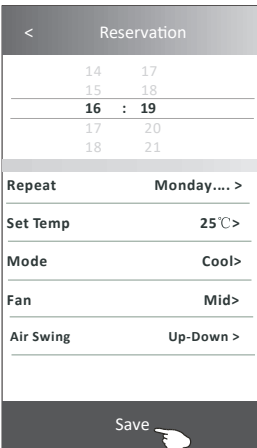
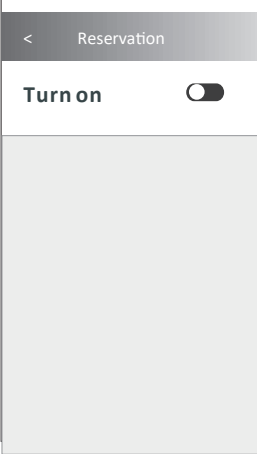


Air conditioner control

More functions

11. Tap the "Self-diagnosis" button, if it is available on the screen.

  The air conditioner will automatically diagnose itself and indicate the Error code and the troubleshooting instructions if an abnormal condition is present.

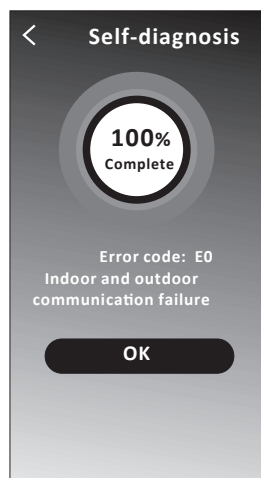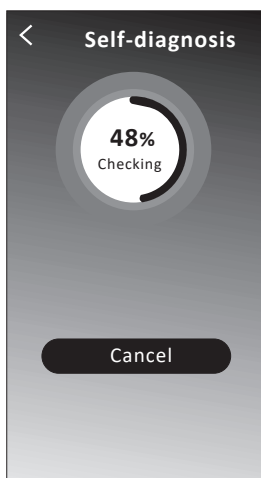

12. Tap the "☀️" button if it is available on the screen.

^{Photosensitive}
This function allows the air conditioner to turn on/off the display automatically according to the light intensity

13. Tap the "🌀" button if it is available on the screen.

^{Soft Wind}

 
In this function, the air conditioner will blow soft airflow through the micro holes on the deflector.

Air conditioner control



Device details and management

Tap  on the control panel to get into the device details screen. Here you can get some useful information and share the device with other accounts. Check the following pictures and instructions carefully. The Main control screen may appear slightly different, depending on the air conditioner model.

Control form1

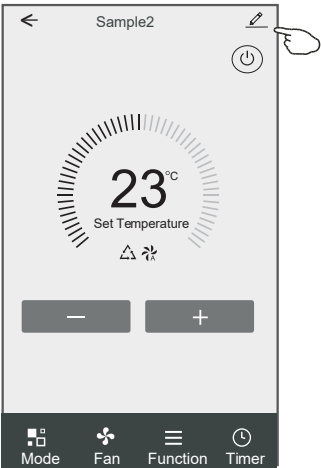



Control form2

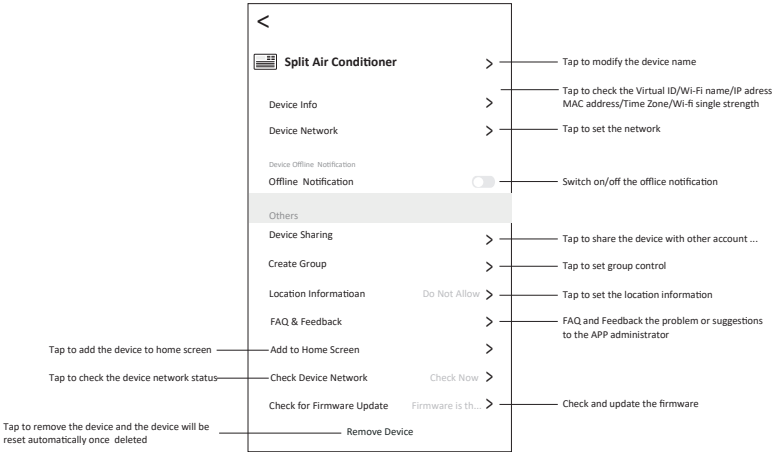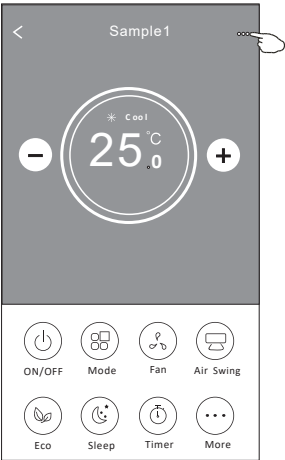  

Air conditioner control

Device details and management - How to share the devices with other accounts?

  
1. Tap "Device Sharing" and the Device Sharing screen will pop up.
2. Tap "Add Sharing". The person with whom you are sharing must have set up an account.
3. Select the region and enter the account with which you want to share.
4. Tap "Done", the account will appear on your sharing list.
5. The receiving sharing members should go to their home screens and slide down to refresh their device lists, this device will appear on their device lists.

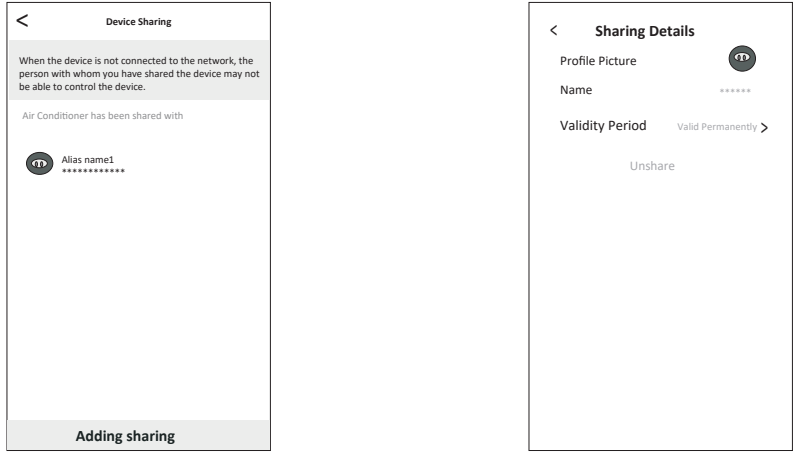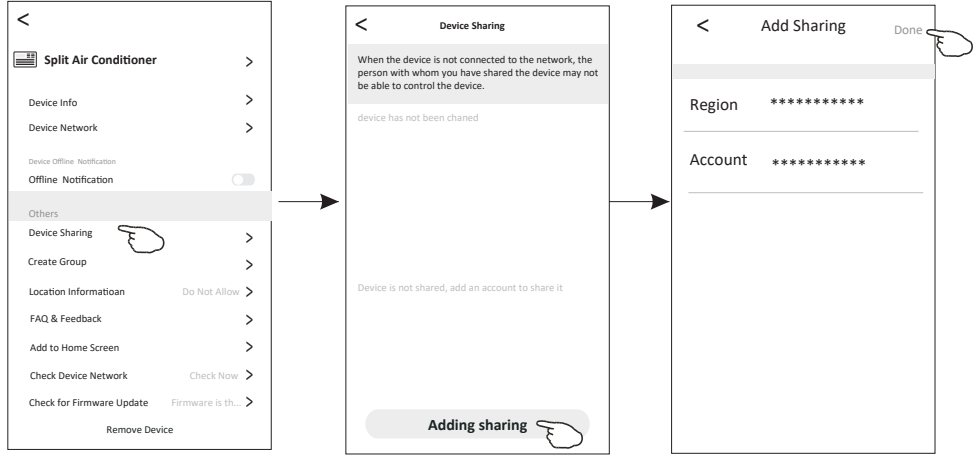


Account management

Account Profile setting

 1.Account setting

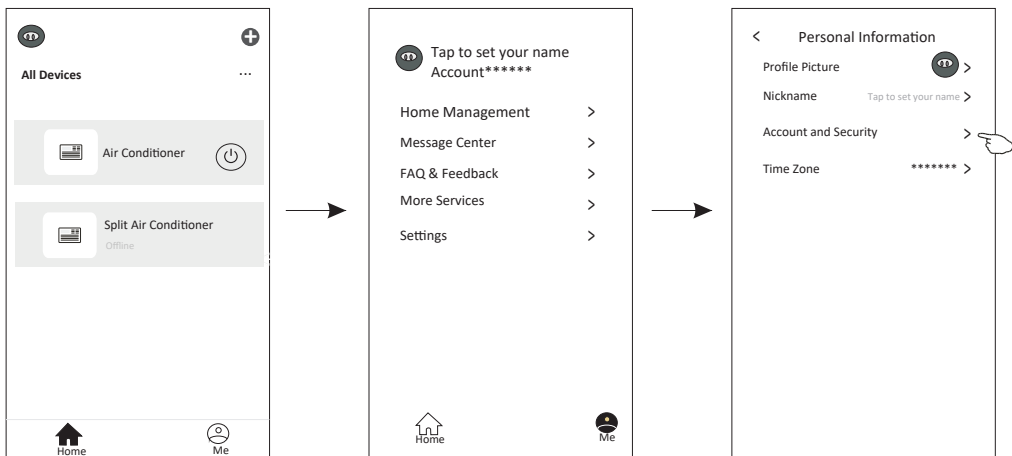

 
2.Account and security

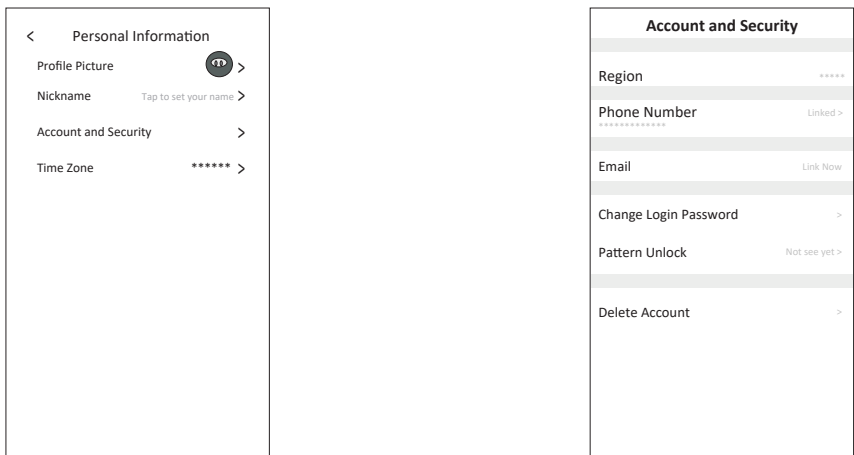


Notice

Home(Family) management

 1. Tap “ Home Management ”

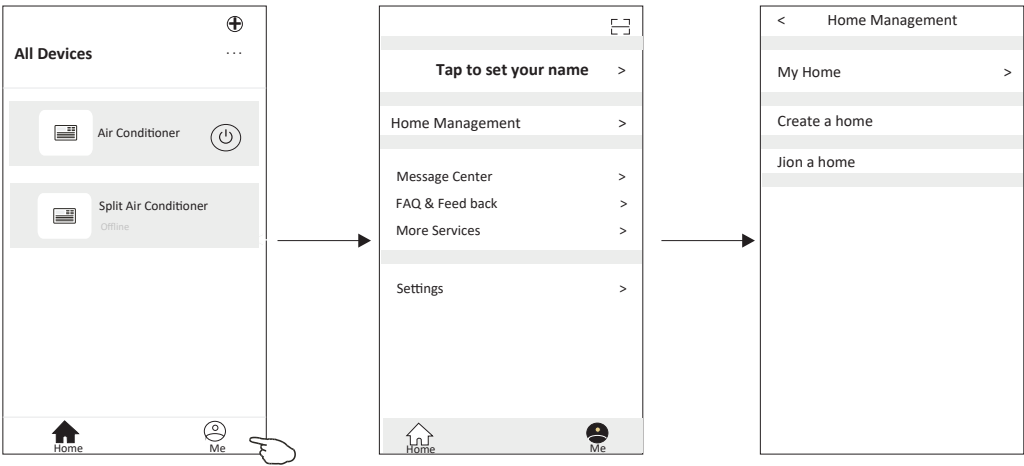

2. Enter the Home Name, set your location and specify the rooms by choosing the recommended room like “Living Room” or tapping “Add Room”
- 3.Create a Home
- 4.Join a Home, Enter the invitation code and tap ->

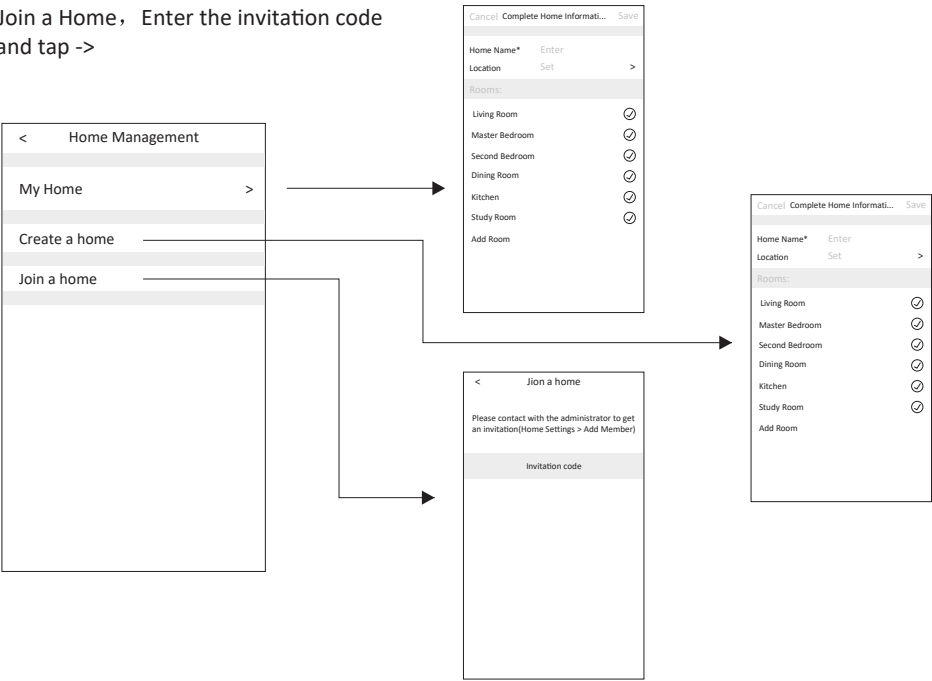

Notice

1. Due to frequent technical updates, there may be deviations of the current items from what is on the manual. We express our apologies. Please refer to your current product and APP.
2. The Smart air conditioner APP can be altered without notice for quality improvements and also be deleted depending on the circumstances of manufacturing firms .
3. In the case the Wi-Fi signal strength is weak, the smart App may disconnect. So make sure the indoor unit is near to the wireless router.
4. DHCP server function should be activated for the wireless router.
5. The internet connection may fail because of a firewall problem. In this case, contact your internet service provider.
6. For smart phone system security and network setting, make sure the Smart air conditioner APP is trusted.

Troubleshooting

Description	Analysis of cause
Air conditioner can't be configured successfully	1. Check that the mobile connected WLAN router SSID and password is correct; 2. Check whether there are additional settings of WLAN router as shown below. 1) Firewall by router itself or by PC 2) MAC address filtering 3) Hidden SSID 4) DHCP server Reboot WLAN router, mobile device and air conditioner (WLAN module) and pair the air conditioner again. Before rebooting, check nobody has already connected to the same air conditioner.
Mobile can't control air conditioner	1. When air conditioner (WLAN module) is rebooted and app displays Device remove?, ignoring this confirmation will lead to mobile device losing control permission for the air conditioner. You will need to pair the air conditioner again. 2. In case of a power failure, the mobile device will lose control permission of air conditioner for 3 minutes after power is restored (Notification will not show up on the mobile device.) If you cannot control the app (air conditioner) even after power is restored, you will need to pair the air conditioner again.
Mobile can't find air conditioner	1. App displays Air conditioner Device offline. Please check the following conditions. 1)The air conditioner has been reconfigured. 2)Air conditioner has no power. 3)Router has no power. 4)Air conditioner can't connect to router. 5)Air conditioner can't connect to network through the router. 6)Mobile device can't connect to network. 2. After adding the device, it disappears from the device list . Hold and slide down to refresh the device list. If no change, shut down the app and start again.

